GOLDEN Elegane lighting for everydray living

INSTALLATION INSTRUCTIONS

Fixture Name: Heartwood 8063-1W BUS

For Wall Mount Light Fixture

WARNING! SHUT OFF POWER AT FUSE OR CIRCUIT BREAKER.

HANGING THE FIXTURE(Fig.1)

- 1.Carefully remove the new fixture from the carton and the yellow parts bag. Check that all parts are included as shown in the illustration and parts list.
- 2. Shut off power at the circuit breaker and remove the old fixture from wall, including the old mounting strap.
- 3. The Mounting Strap(F) contains several pairs of threaded holes, find the pair of holes that match the holes spacing in your fixture Back Plate(S) and thread the two Fixture Mounting Screws(D) half way into the Fixture Mounting Strap(F) and secure with Hex Nut (G).
- 4. Place the Mounting Strap(F)over the Junction Box so the Fixture Mounting Screws(D) are vertical or horizontal, as required by the fixture type.
- 5. Attach the Mounting Strap(F) to the Junction Box using the two mounting screws(H). Tighten the screws(H) securely with screw driver.


CONNECTING THE WIRES (Fig 2)


- Attach the power supply wires to the fixture lead wires by connecting BLACK to BLACK (or SMOOTH) and WHITE to WHITE (or RIBBED).
- 7. Attach the GROUND wire(GREEN or COPPER) from the Junction Box and the fixture Ground wire to the green Ground Screw on the Mounting Bracket (I) or connect both wires together using the correct size of wire connectors.
- NOTE: Twist the wires together in the same direction you twist the wire connector onto the wires.
- 8. Tuck these wire connections neatly into the Junction Box.


FINISHING THE INSTALLATION(Fig.3)

- 9. After tucking these wire connections neatly into the Junction Box and place the fixture Back Plate(S) over the two Mounting Screws(D) and secure the Back Plate(S)against the wall by threading two Deco Nuts(O) over the two Mounting Screws(H) until tight as shown on Fig.3.
- 10. Install glass as per the fixture assembly instructions.

YOUR INSTALLATION IS NOW COMPLETE. RETURN POWER TO THE JUNCTION BOX AND TEST THE FIXTURE.

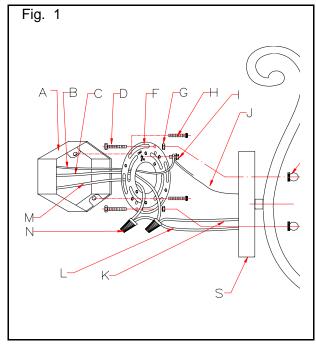

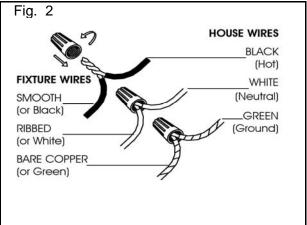

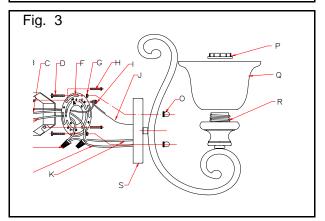



PARTS & ASSEMBLY SHEET

Fixture Name: Heartwood 8063-1W BUS

This fixture assembled PO: [Date:
------------------------------	-------

Notice: Please review the parts listing and check for all parts before assembling the fixture. If any parts are missing or damaged, please note onthis sheet and contact the place of purchase to arrange for replacement parts.

D A DEC TION		Company Name:			Co. Account #:			
PARTS LIST			to be filled out	ailer				
Mounting Strap	1ea		Mounting Screws	4ea		Deco Nut	2ea	
Hex nut	2ea		Wire connectors	2ea		Green Screw	1ea	
Part Needed						Quantity		
Part Needed						Quantity		
Reason why Comments	(missing, scratched, broken glass, bent, bad finish)							

FIXTURE ASSEMBLY INSTRUCTIONS


Read and review installation instruction sheet before assembling the fixture.

- 1. Place the fixture Back Plate (S), over the threaded rod, so it protrude through the hole in the Back Plate (S).
- 2. Thread the Deco Nut (O) onto the threaded rod and continue turning until the Back Plate(J) is snug against the wall .
- Place the Glass Shade (Q) over the Threaded Socket (R)
- Holding the Glass Shade (Q), and secure it by threading the Socket Ring (P) onto the Threaded Socket (R) until tight.
- 5. Install the light bulbs in accordance with the fixture's specification .

(DO NOT EXCEED THE MAXIMUM WATTAGE RATING!)

NOTE: INSTALL THE GLASS ASSEMBLY AFTER THE FIXTURE IS HUNG.

8063-1W BUS

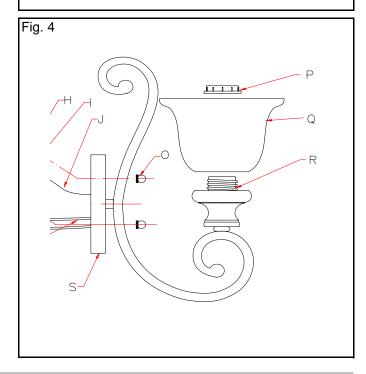

For Customer Service, contact the place of purchase to arrange for replacement parts.